

GOBI TOYOTA LAND CRUISER 80 STEALTH ROOF RACK INSTALLATION INSTRUCTIONS

Guidelines:

When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

- For quality fits and safty, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warrenty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyound the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any lock, know, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before intering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.

GOBI TOYOTA LAND CRUISER 80 STEALTH ROOF RACK INSTALLATION INSTRUCTIONS


Tools Required:

- 1- 5/32" Allen Wrench**
- 1- 7/16" Open and Boxed end Wrench**
- 1- 1/2" Open and Boxed end Wrench**
- 2- 9/16" Boxed end Wrench**

GOBI TOYOTA LAND CRUISER 80 STEALTH ROOF RACK INSTALLATION INSTRUCTIONS

Included in kit

Letter	Description	Location	Quantity
A	GOBI TOYOTA LAND CRUISER 80 SERIES ROOF RACK	Main box	1
B	FAIRING RUBBER PROTECTIVE STRIP	pre-assembled	1
C	FAIRING	banded to rack	1
D	FAIRING BRACKETS (pre-assembled to fairing)	pre-assembled	3
E	FAIRING BRACKET HARDWARE CONTENTS: 3- 1/4-20x 5/8" SS Button head screw 6- 1/4" Black nylon washer 3- 1/4-20 Nylok nut	BAG #2 Hardware Box	1
F	GOBI SUPPORT BRACKETS	Hardware Box	8
G	GOBI SUPPORT BRACKET HARDWARE CONTENTS: 16- 3/8-16x1 stainless steel hex bolt 32- 3/8" stainless steel washer 16- 3/8" Nylock nut grade 8 yellow zinc 8- rubber pad black 1- Packet Anti-seize lubricant	BAG #3 Hardware Box	1

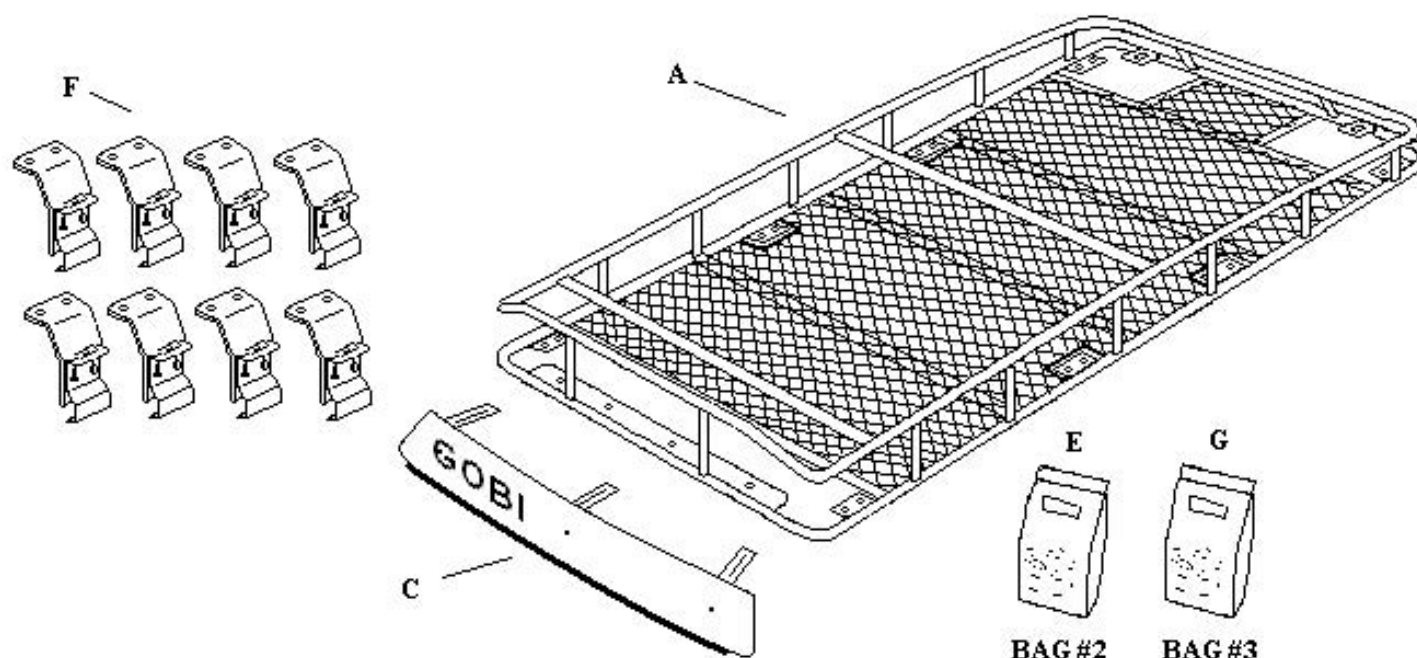

GOBI TOYOTA LAND CRUISER 80 STEALTH ROOF RACK INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS:



- 1- Refer to page 3 and make sure all hardware is presented prior to install.
- 2- Read all instructions carefully prior to install.
- 3- Refer to page 3 remove all support brackets "F" from the hardware box and attach as shown on page 6 Fig. 1 to each flange #11 of the roof rack using the 3/8-16 screws, flat washers and nylock nuts located in Bag #3 of your hardware kit. Be sure to place rubber pad (7) between roof rack's flange (11) and support bracket "F". Snug down only at this time.
- 4- Refer to page 6 Fig. 2 and fully loosen screws (9a) and (9) then with the help of two to three more persons lift the roof rack on to the vehicle gutter (12) as shown in Fig. 3. Make sure as you set the support brackets "F" into the vehicle gutter (12) that you move clamp plates (9) out from the inside of the gutter. Only support bracket "F" must rest into the gutter shelf as shown in Fig. 2. Position the rear of the roof racks both passenger and driver sides approximately 8" (20.32cm) from the rear of the vehicle gutter as shown in Fig. 3. After the roof rack is resting properly in the vehicle's gutter (12) position all clamp plates (6) so that they wrap around the underside of the gutter lip (12a) as shown in Fig. 2. Then snug down all screws (9) still allowing upward travel of clamp (6). Tighten screw (9a) to pull up clamp plate (6) against the underside of gutter lip (12a) as shown in Fig. 2. Once clamp plate (6) has been tightened to prevent upwards movement of the roof rack fully tighten screws (9) to prevent any movement of the clamp plate and roof rack during transport. Continue the same procedure to the other seven support brackets "F". After all screws (9) have been tightened go back and retighten all screws (9a) to prevent loosening during use.
- 5- Refer to page 6 Fig. 1 and completely tighten all screws, flat washers and nylock nuts (11) to securely anchor roof rack (A) to Gobi support brackets "F" as shown.

GOBI TOYOTA LAND CRUISER 80 STEALTH ROOF RACK INSTALLATION INSTRUCTIONS

INSTALLATION INSTRUCTIONS CONT.

- 6- Refer to page 7 #2 Fairing comes preassembled with fairing brackets #4 attached. The position of each attached fairing bracket may not be fixed at the proper height for your particular roof line. Refer to page 7 Fig. 4. Adjustments may have to be made in order for the fairing to conform correctly to your vehicle's roof line. Begin by attaching the fairing's center bracket #4 to the middle slot #5a of the Gobi roof racks light bar #5 shown on page 7 Fig. 4. Use the 1/4" screws, flat black nylon washers and Nylock nuts located in Bag #2 of your hardware kit. Provide approximately a 2" gap between the fairing and the Gobi rack outer tube as shown on page 7 Fig. 5b. Tighten down the center nut and screw at this time. Proceed to either the passenger or drivers side and pull the fairing in the direction of the arrows on page 7 Fig. 5 letters "F" and "G" while pushing down on the fairing towards the vehicle roof top at the same time. Pull each side until the fairing either makes contact with the Gobi roof rack or comes in close proximity. Align fairing brackets #6 to the Gobi light bar fairing slots at the ends of the Gobi light bar #5 (*fairing brackets may appear to be slightly tilted against the light bar but this is normal and brackets will flatten out after tightening*) and insert the 1/4" screw and flat black nylon washer through fairing bracket #6 then through the Gobi light bar slot and secure the fairing in place with the 1/4" black nylon washer and Nylock nut. Proceed to the opposite side and continue attaching the fairing in the same manner. Be sure that the fairing throughout its length is making contact with the roof top as snug as possible. Fairing brackets may need to be adjusted either up or down and in some cases you may bend the fairing bracket to accommodate the final result. Once the fairing is in the proper position tighten all fairing bracket screws firmly. Roof rack installation is complete.

GOBI TOYOTA LAND CRUISER 80 STEALTH ROOF RACK INSTALLATION INSTRUCTIONS

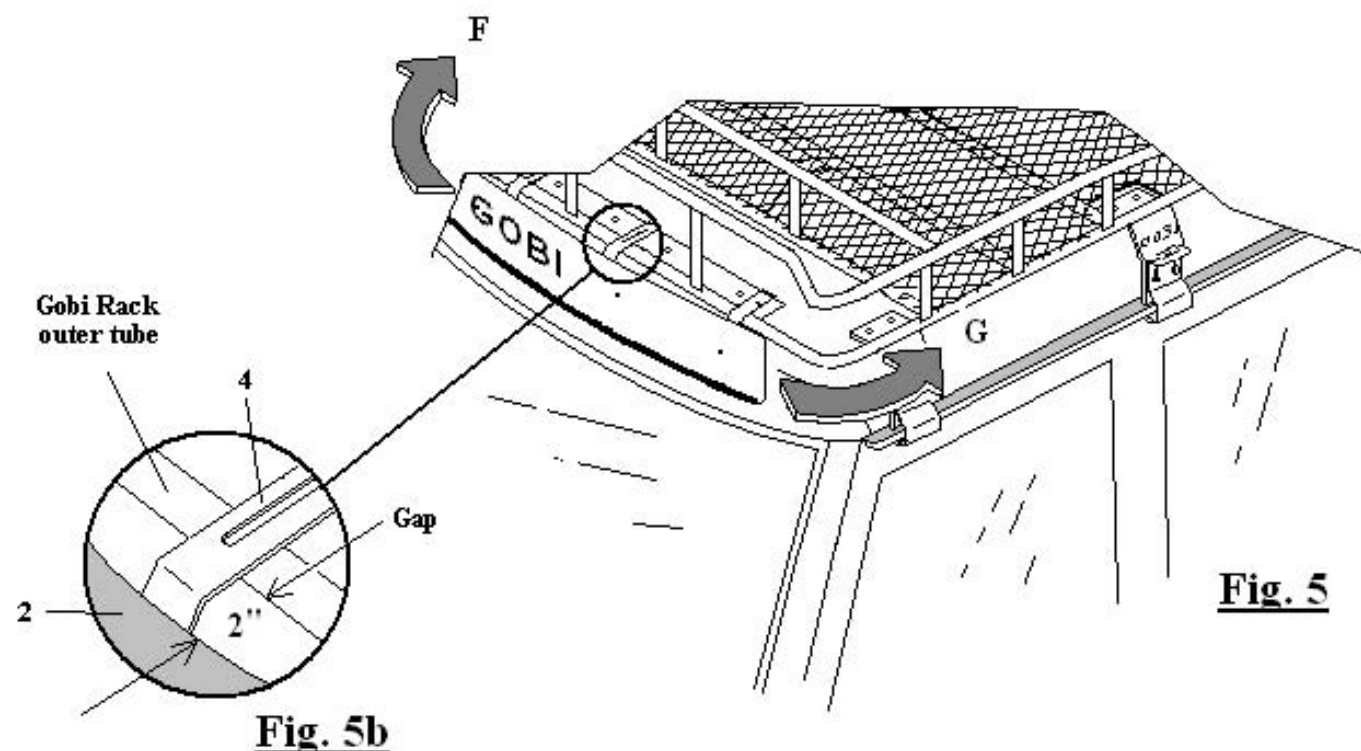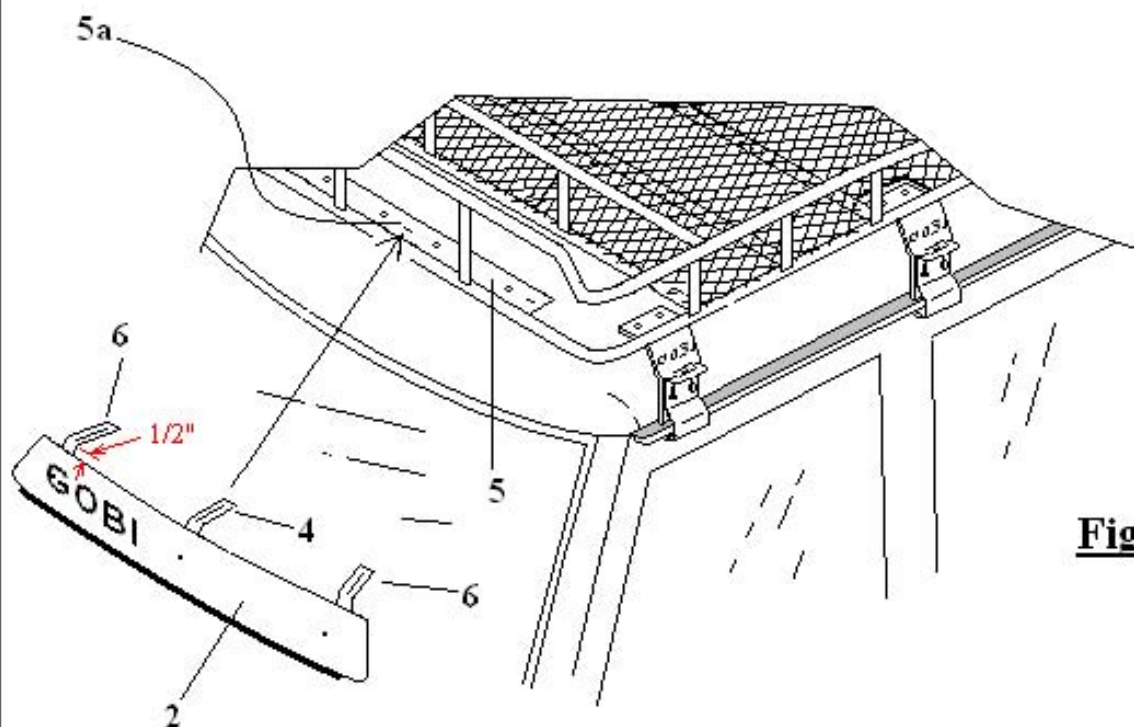

INTELLIGENT DESIGNS 2000 CORPORATION

This limited one year warranty covers ONLY Intelligent Designs 2000, Corporation ("ID2000") products. Please review the terms and conditions of the limited warranties below.

LIMITED ONE YEAR WARRANTY

All warranties and representations, except as set out below, are hereby disclaimed, (including fitness for the purchaser's intended use or purpose and merchantability), all products being sold AS IS, without warranty beyond that made herein, with the purchaser assuming: 1) the entire risk as to the quality and performance of the goods, 2) the cost of any repairs not covered herein.

Intelligent Designs 2000 Corporation warrants, as limited herein, to the original purchaser that its product which have been properly installed per provided instructions are free from defects in material and/or workmanship. At Intelligent Designs 2000 option, the purchaser's remedy hereunder shall be limited to repair or replacement of defective parts returned to the place of purchase or to Intelligent Designs 2000 at the purchaser's expense.

Intelligent Designs 2000 warranty, as herein, shall only be effective while the original purchaser owns the vehicle on which the product or products was installed and shall not apply if the product has been removed from the original vehicle. Intelligent Designs 2000 warranty is void if any damage to the product or products is due to misuse, abuse, neglect, accident, improper installation, or contact with on-road or off-road hazards, product modification, improper or inadequate maintenance or any use contrary to the instructions accompanying the product. Intelligent Designs 2000 warranty only covers the cost of the defective part and not the cost of removal, installation, and painting or other incidental or consequential charges or damages, or personal injury damages, and does not cover use of any product on racing vehicles. Intelligent Designs 2000's warranty is not transferable from the original purchaser.

THIS LIMITED WARRANTY DOES NOT APPLY TO:

1. Damages or problems that result from shipping, installation, maintenance, or separate system components.
2. Damages or problems that result from misuse, abuse, operation outside environmental specifications or contrary to the requirements or precautions in the Installation Instructions, accident, lightning strikes or other natural causes, unauthorized modification or alteration, incorrect electrical current or voltage, other causes not arising out of defect in material or workmanship.
3. Therefore, the cost of repair or replacement of such defective product shall be borne by the customer.

To assure product quality, Intelligent Designs 2000 reserves the right to change product designs, materials, specifications and finishes without prior notice to customers. Intelligent Designs 2000's warranty gives you specific legal rights and you may also have other rights, which vary from state to state. Some states do not limit on how long an implied warranty lasts, so the above limitations may not apply to you. Also, some states do not allow the exclusion or limitation of incidental or consequential damages so the above limitations or exclusions may not apply to you. Intelligent Designs 2000 reserves the right to discontinue product lines and substitute products or provide other remedies other than those listed in the limited warranty for those discontinued products.

THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANT ABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. INTELLIGENT DESIGNS 2000 CORPORATION/ GOBI RACKS USA WILL NOT BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, OR INCIDENTAL DAMAGES OF ANY KIND INCLUDING LOSS OF REVENUES OR PROFITS, IN CONNECTION WITH THE PRODUCT(S). SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

REQUESTING WARRANTY COVERAGE

For this warranty to be effective, it is strongly recommended that the purchaser completes and returns the warranty registration to Intelligent Designs 2000 within ten days of the date of purchase. Replacement parts can be obtained by returning the part along with proof of purchase. Warranty claims cannot be determined until the merchandise is received and inspected. **Returns made to Intelligent Designs 2000 will not be accepted without prior authorization from Intelligent Designs 2000. This included but is not limited to all shipping costs and all other incidental costs to be paid by the customer. Please call the customer service department at the number below.**

LIMITED LIABILITY WARRANTY

Intelligent Designs 2000 Corporation warrants this product to be free of original defects in materials or workmanship as long as the original purchaser owns the motor vehicle on which it is installed. This warranty does not cover damage resulting from accident, misuse or abuse, neglect, lack or reasonable care, or improper installation. The Company will repair or replace, at its option, any product covered by this warranty that becomes defective. This is a parts-only warranty and such repair or replacement shall be the Company's sole obligation and the customer's sole remedy for a defective product. The Company shall have no liability for personal injury, property damage, incidental, or consequential damages of any kind or nature. THIS FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND THE COMPANY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

To obtain warranty service, return this portion to Intelligent Designs 2000 Corporation with a proof of purchase to the address below. Please include;

First Name _____	Last Name _____
Address _____	City _____
E-mail _____	State _____
Phone Number _____	Zip Code _____