

# GOBI JK REAR RACK ARB 1250 AWNING MOUNT BRACKETS

## INSTALLATION INSTRUCTIONS

### Guidelines:

When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

- For quality fits and safty, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warrenty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyound the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any lock, know, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before intering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.

## GOBI JK REAR RACK ARB 1250 AWNING MOUNT BRACKETS INSTALLATION INSTRUCTIONS


### Included in kit

Letter	Description	Location	Quantity
A	GOBI ROOF RACK REAR ARB AWNING MOUNT BRACKETS	Hardware Box	2




## GOBI JK REAR RACK ARB 1250 AWNING MOUNT BRACKETS INSTALLATION INSTRUCTIONS

### Step 1

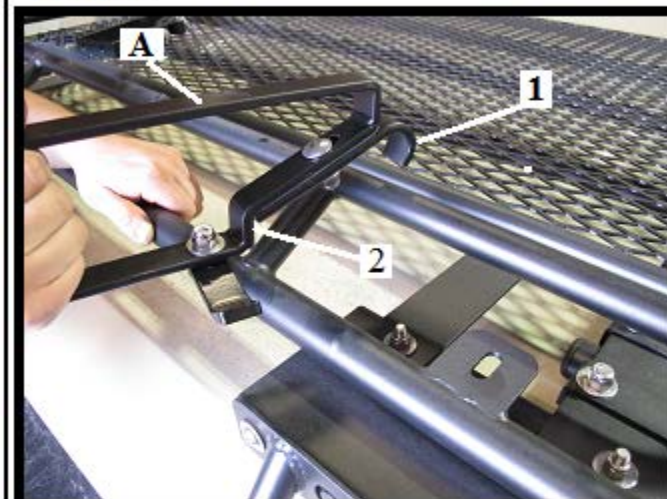


Install rear awning bracket assembly (A) so that hook (1) slips over top tube at the rear of roof rack as shown in Step 1, at the same time position back stop (2) over front of lower tube as shown in Fig. 1 and Fig. 2.

### Step 2

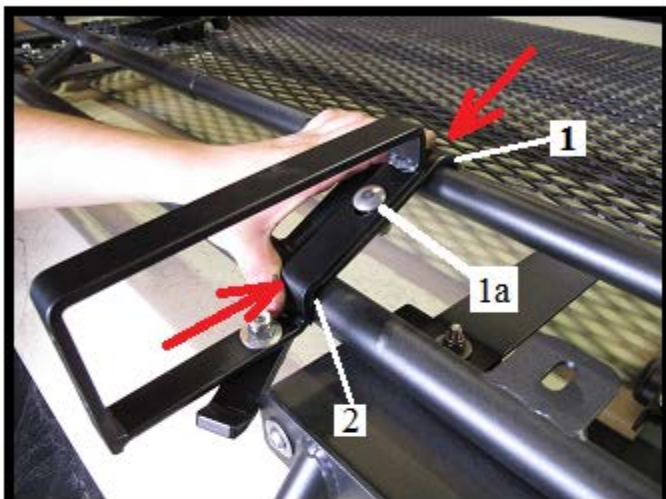

Push main awning bracket back stop (2) so that it contacts lower rear rack tube and pull down hook (1) to make tight contact with upper rack tube at the same time as shown by the red arrows. Screw (1a) may need to be loosened to make adjustment. Once bracket adjustment has been made fully tighten screw (1a).

### Step 3

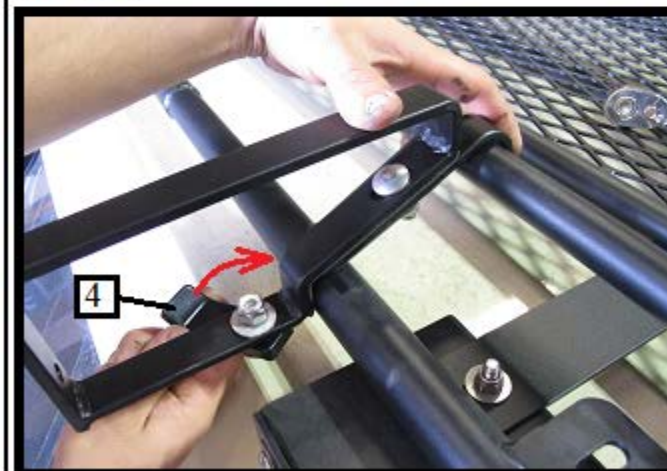

Swing clamp (4) under lower tube as shown by the red arrow.

### Step 4




Fully tighten clamp (4) in place using two box or ratchet wrenches. Apply the same procedure to the second awning bracket. Install both brackets as far apart as possible for optimal awning support.

## GOBI JK REAR RACK ARB 1250 AWNING MOUNT BRACKETS

### INSTALLATION INSTRUCTIONS

#### STEP 4

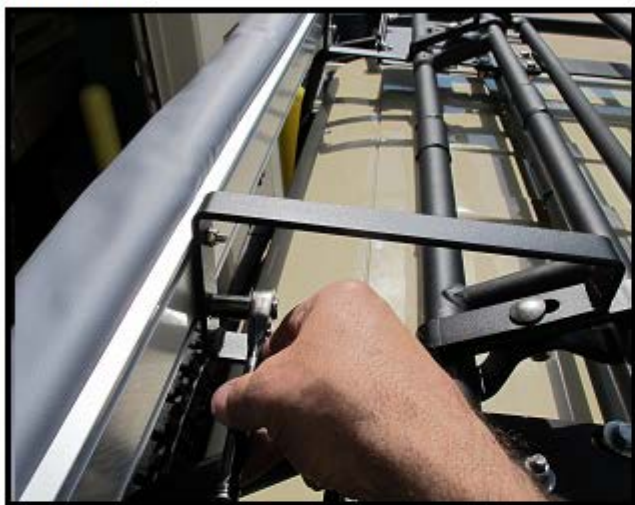

Install the 54" ARB awning onto the Gobi rack rear awning mount brackets using the ARB supplied hardware center awning to vehicle and fully tighten in place.



### INSTALLATION COMPLETED