

GOBI RACK MINI WIND DEFLECTORS INSTALLATION INSTRUCTIONS

Guidelines:

When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

- For quality fits and safty, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warrenty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyound the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any lock, know, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before intering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.

CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS

GOBI RACK MINI WIND DEFLECTORS INSTALLATION INSTRUCTIONS

Included in kit

Letter	Description	Location	Quantity
A	MINI WIND DEFLECTORS	Main box	4
B	GOBI MINI WIND DEFLECTOR MOUNTING HARDWARE CONTENTS: 4- 3/8-16 x 1" Carriage screw SS 4- 3/8" Flat washer large SS 4- 3/8" Lock washer SS 4- 3/8" Nut SS 1- Packet Anti-seize lubricant	Bag #1	1

A




B



Bag #1

CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS

GOBI RACK MINI WIND DEFLECTORS INSTALLATION INSTRUCTIONS

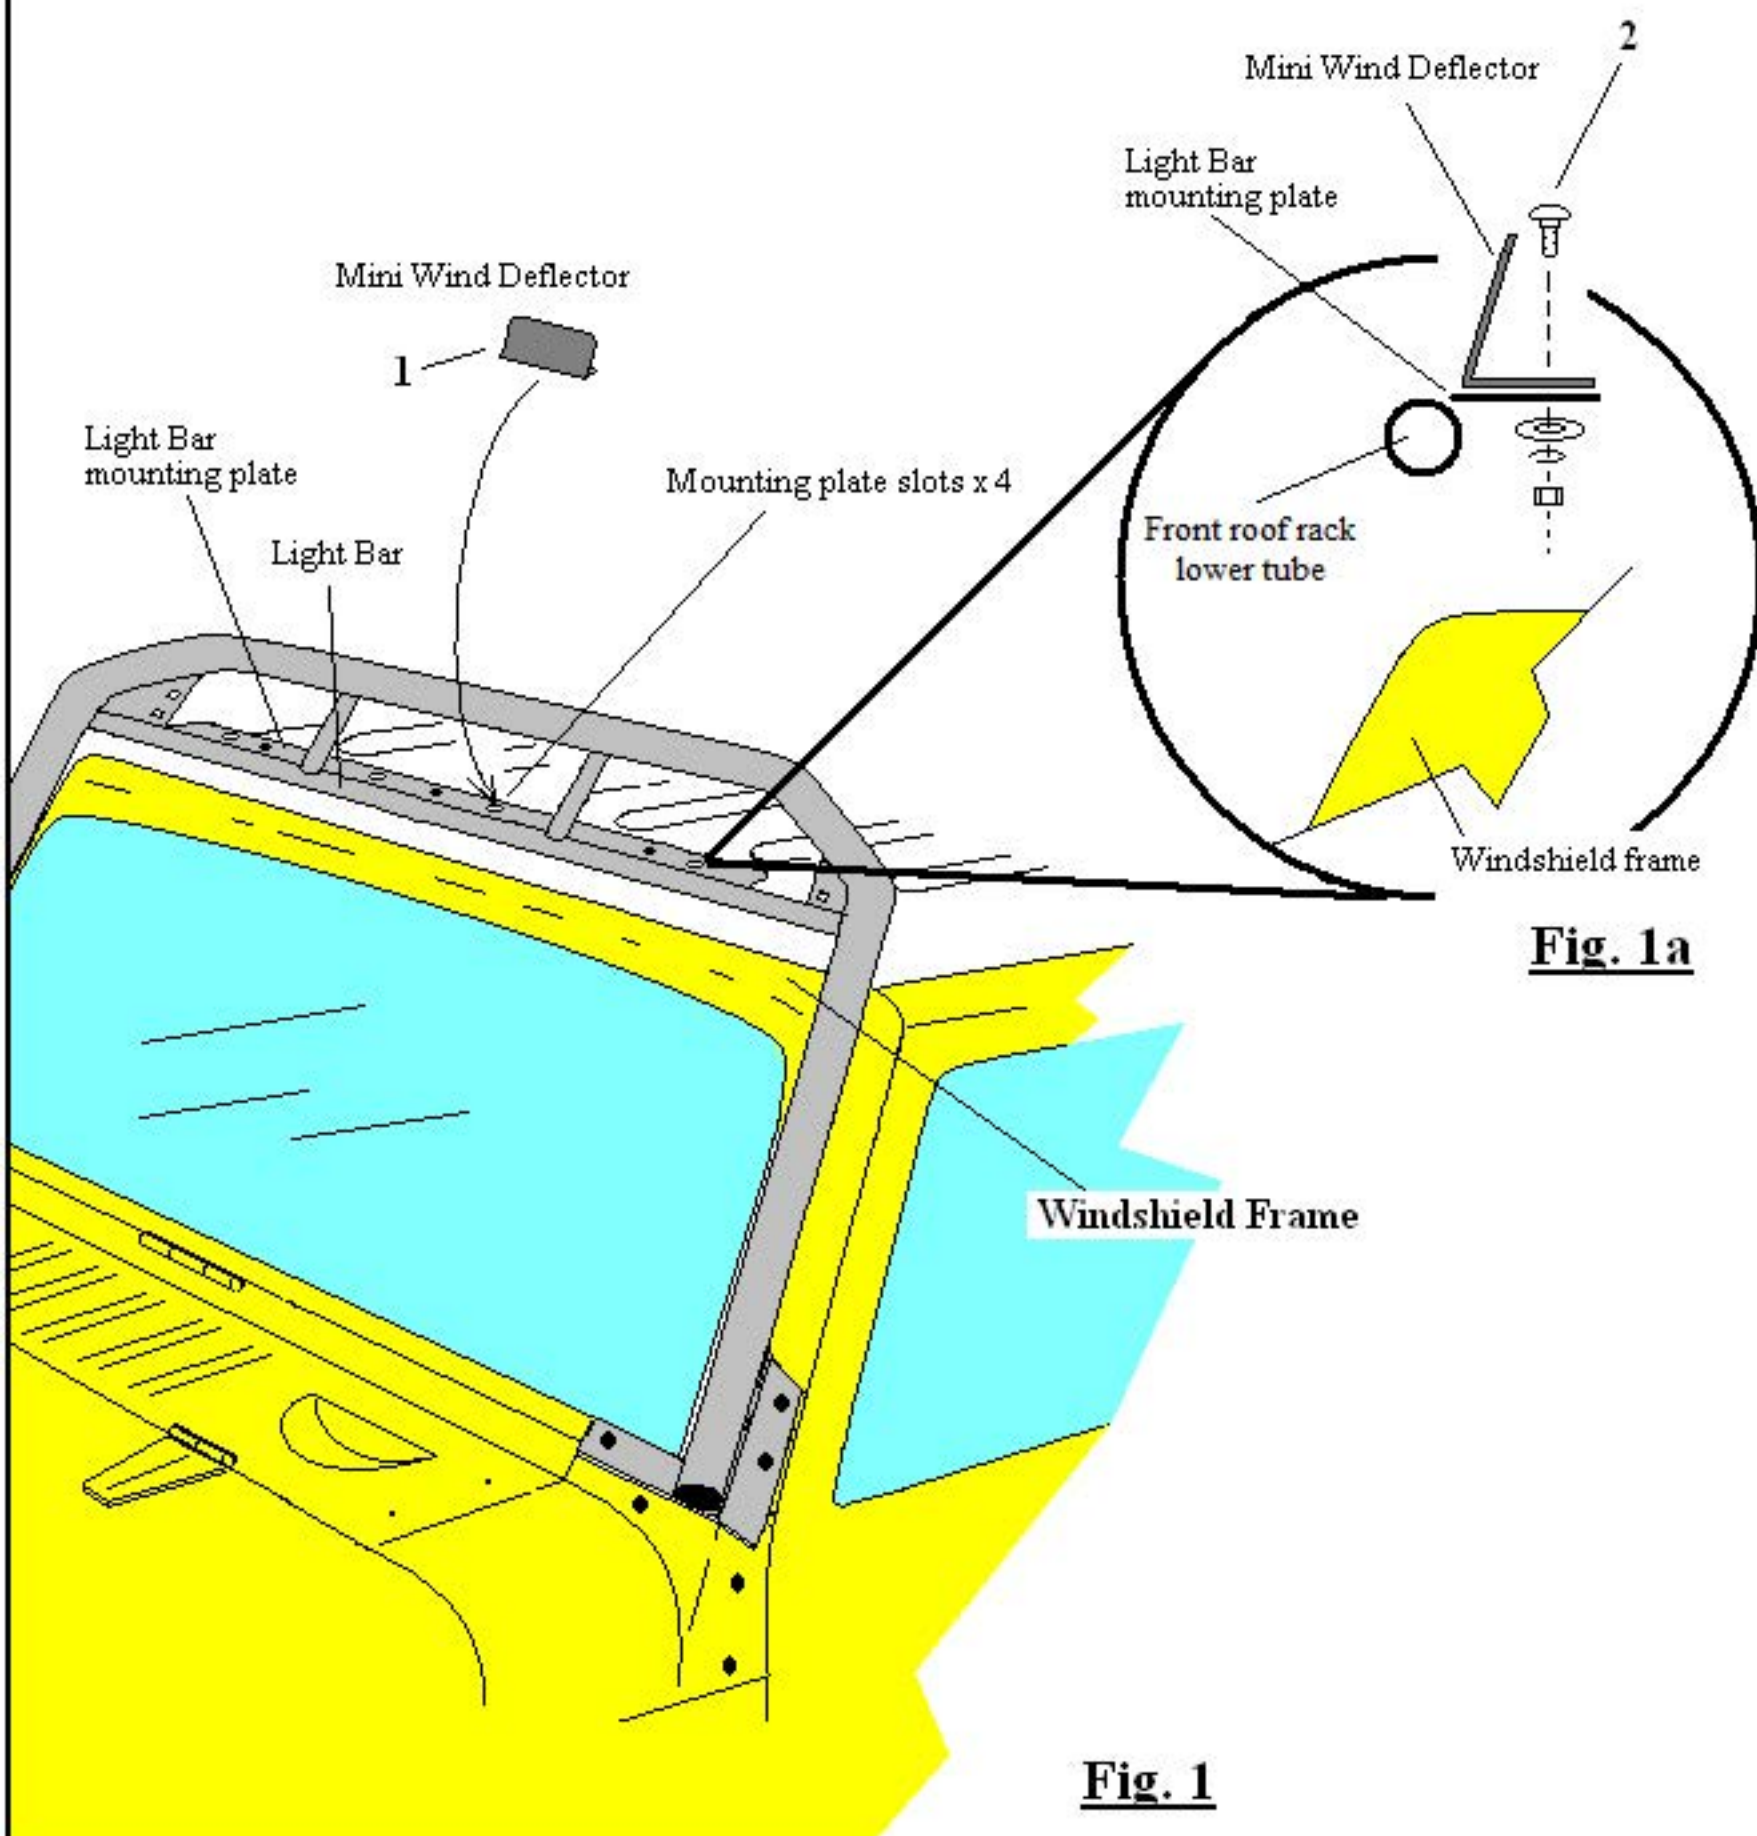

CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS

GOBI RACK MINI WIND DEFLECTORS INSTALLATION INSTRUCTIONS

Installation instructions:

- 1- Refer to page 2 make sure all hardware listed is present prior to installation.
- 2- Read all instructions carefully prior to installation.
- 3- Remove all 4 Black Mini Wind Deflectors (1) from your hardware kit and place them one at a time over each slot of your Gobi light bar mounting plate as shown on Fig. 1 page 3. Attach each Mini Wind Deflector in place using the 3/8 x 1" stainless carriage bolt, washers and nut (2) located in your hardware Bag #1 as shown in Fig. 1 a, finger tighten only at this time. After all Mini Wind Deflectors have been installed align each Wind Deflector so that they appear evenly spread within the Gobi light bar and straight in line with the light bar and secure in place. Installation is completed.

CAUTION: USE ANTI-SEIZE LUBRICANT ON ALL SCREWS