



GOBI STEALTH EXTREME 42" LED LIGHT BRACKET INSTALLATION INSTRUCTIONS

Included in kit

Letter	Description	Location	Quantity
A	GOBI STEALTH EXTREME 42" BRACKETS PASSENGER AND DRIVER	Main box	1 set
B	CRADLE HARDWARE <u>CONTENTS:</u> 2- 3/8 X 1" SS Carriage bolts 2- 3/8" Flat washer grade 8 yellow zinc 2- 3/8" Nylock nut grade 8 yellow zinc 2- 1" Black Vinyl loop clamp 2- 1/4-20 x 1" Button head SS screws 4- 1/4" Black nylon washers	BAG #1	1

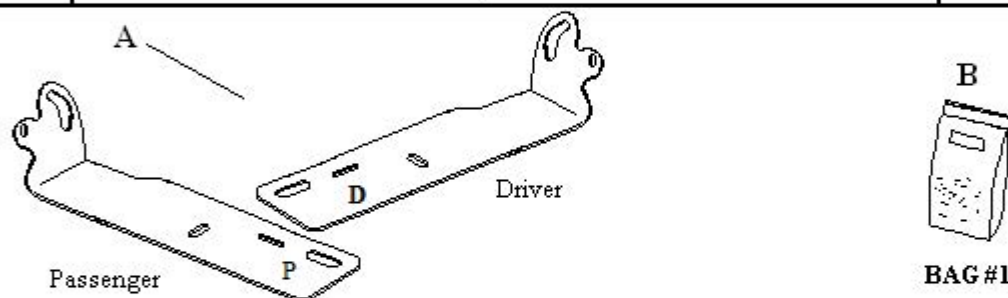

INSTALL

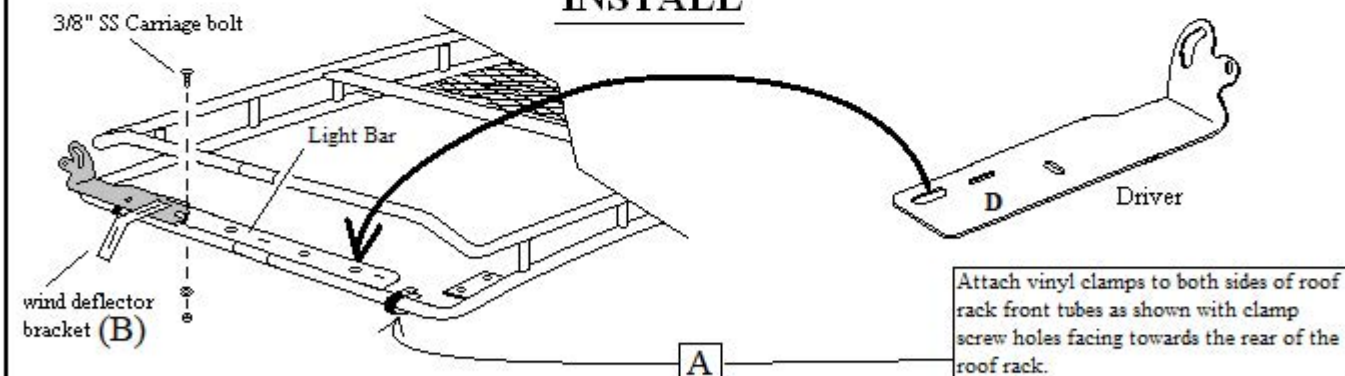

- A) Mount one vinyl covered steel clamp (A) to both sides of the roof rack tube, as shown above without screws at this time. Remove the end wind deflector bracket (B) from the light bar and wind deflector, one side at a time. Then install the passenger side 42" Extreme light bracket using one 3/8-16 x 3/4" carriage screw, flat washer and nylock nut, supplied with your kit. Snug down only at this time. Continue by installing one 1/4-20 x 1" button head stainless screw thru the 42" light bracket and into the vinyl clamp and snug down in place. Do not fully tighten at this time. Re-install the wind deflector bracket (B) over the 42" Extreme bracket and to wind deflector as before, but you will need to use a longer 1/4-20 x 1" button head screw supplied in your kit. Do not fully tighten, leave some play for later adjustment and apply the same procedure the opposite side.
- B) Place the 42" Extreme LED into the brackets and secure in place with the LED hardware and snug down end screws at this time.
- C) Position LED and brackets to the center and in line with the front of the roof rack, then fully tighten both 3/8" carriage screws. Position wind deflector and support brackets (B) as before and tighten in place as shown in the Gobi rack install guide. Fully tighten all screws at this time. Installation completed.