



## GOBI JK/JL/BRONCO 40" RIGID RDS LED LIGHT BRACKET INSTALLATION INSTRUCTIONS

Included in kit

Letter	Description	Location	Quantity
A	GOBI JK/JL/BRONCO 40" RIGID RDS LED LIGHT BRACKETS PASSENGER AND DRIVER	Main box	1 set
B	CRADLE HARDWARE <u>CONTENTS:</u> 2- 3/8 X 1" SS Carriage bolts 2- 3/8" Flat washer grade 8 yellow zinc 2- 3/8" Nylock nut grade 8 yellow zinc	BAG #1	1

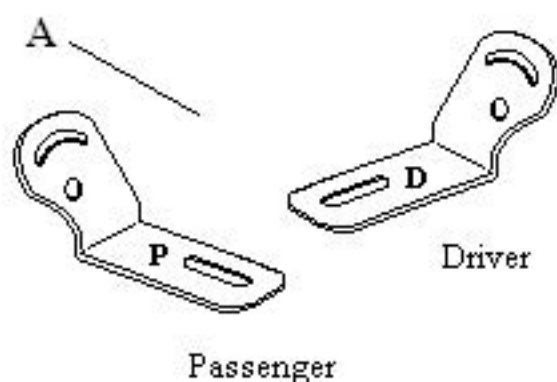

### INSTALL

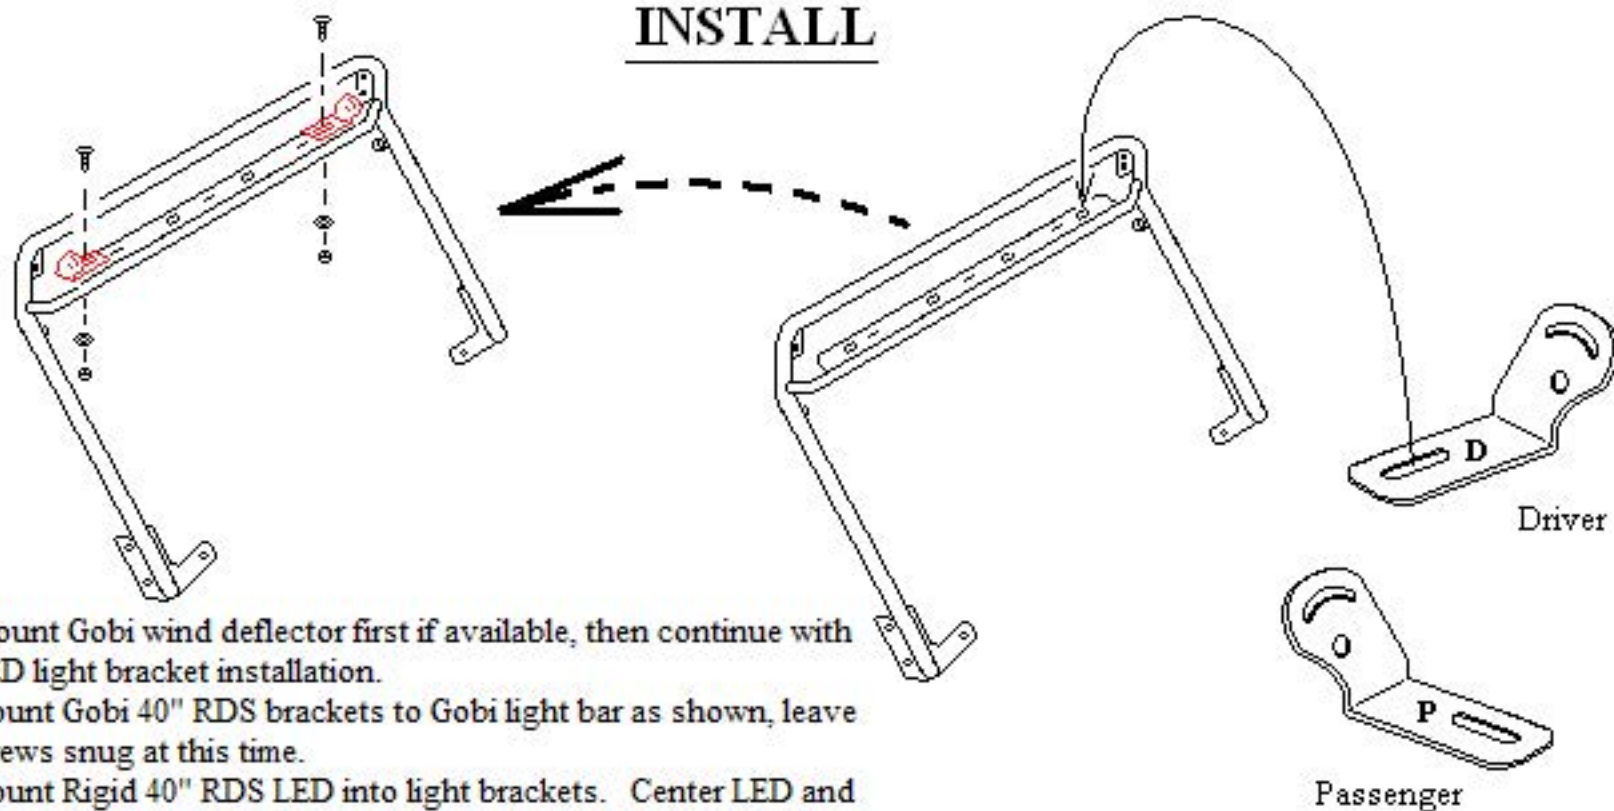

- A) Mount Gobi wind deflector first if available, then continue with LED light bracket installation.
- B) Mount Gobi 40" RDS brackets to Gobi light bar as shown, leave screws snug at this time.
- C) Mount Rigid 40" RDS LED into light brackets. Center LED and brackets, then fully tighten brackets using a 9/16" wrench and fully tighten LED to brackets.