



# GOBI JEEP JK/JL/BRONCO 30" E & SR SERIES LED RIGID LIGHT BRACKET INSTALLATION INSTRUCTIONS

## Included in kit

Letter	Description	Location	Quantity
A	GOBI JK/JL/BRONCO 30" E & SR SERIES RIGID LED LIGHT BRACKETS PASSENGER AND DRIVER	Main box	1 set
B	<b>BRACKET HARDWARE</b> <u>CONTENTS:</u> 2- 3/8-16 X 1" Carriage screws 2- 3/8" SS Flat washers 2- 3/8" SS Nylock nuts	BAG #1	1

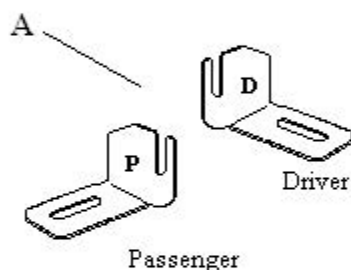

## INSTALL

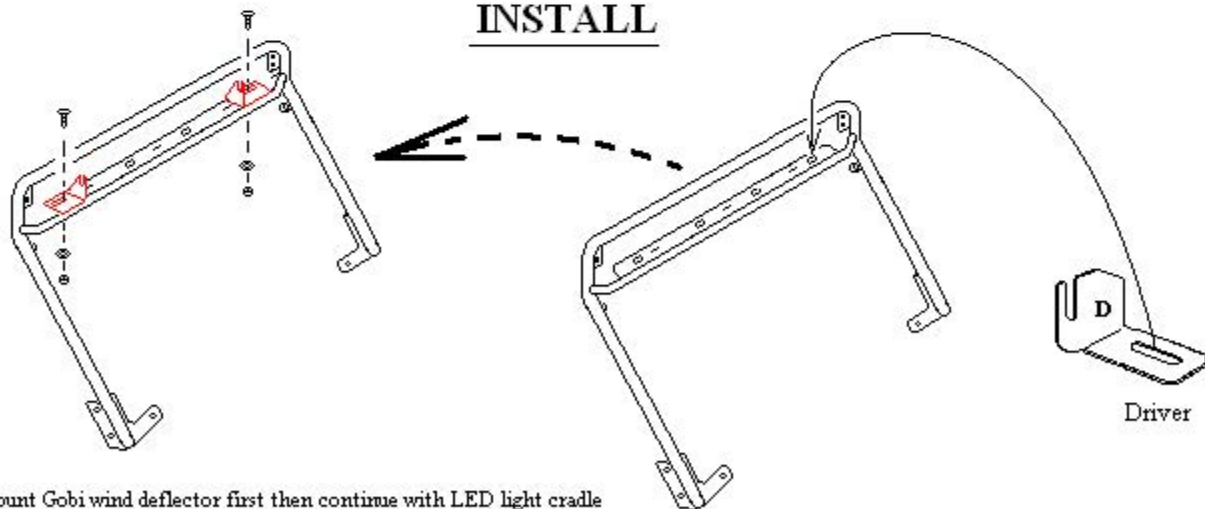

- A) Mount Gobi wind deflector first then continue with LED light cradle installation.
- B) Mount Gobi Rigid 30" E series cradles to Gobi light bar as shown above leave snug at this time.
- C) Mount Rigid 30" LED into cradles, center cradles to light bar then fully tighten cradles in place.