



GOBI TOYOTA 4 RUNNER 4TH, 5TH AND FJ ROOF RACKS EXTERNAL MOUNT 40" LED E SERIES RDS LIGHT BRACKETS INSTALLATION INSTRUCTIONS

Included in kit

Letter	Description	Location	Quantity
A	GOBI 40" RIGID RDS E BRACKET SET PASSENGER AND DRIVER SIDES	Main box	1 set
B	<p>BRACKET HARDWARE</p> <p><u>CONTENTS:</u></p> <p>2- 3/8-16 x 1" SS Carriage screws 2- 1/4-20 x 1" SS Button head screw 2- 3/8" SS Flat washer 2- 1/4" SS nylock nut 2- 3/8" SS Nylock nut 4- 1/4" Black nylon flat washer</p>	BAG #1	1

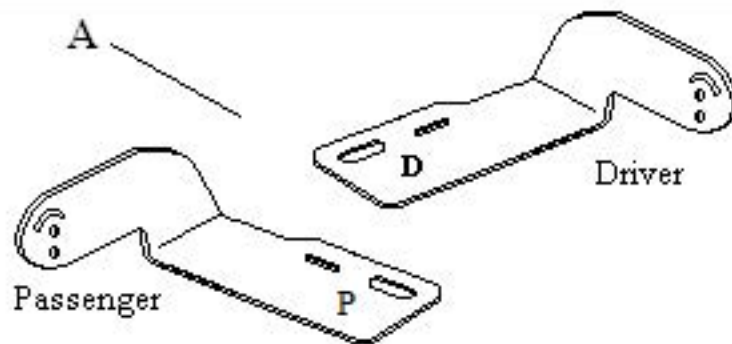

INSTALL

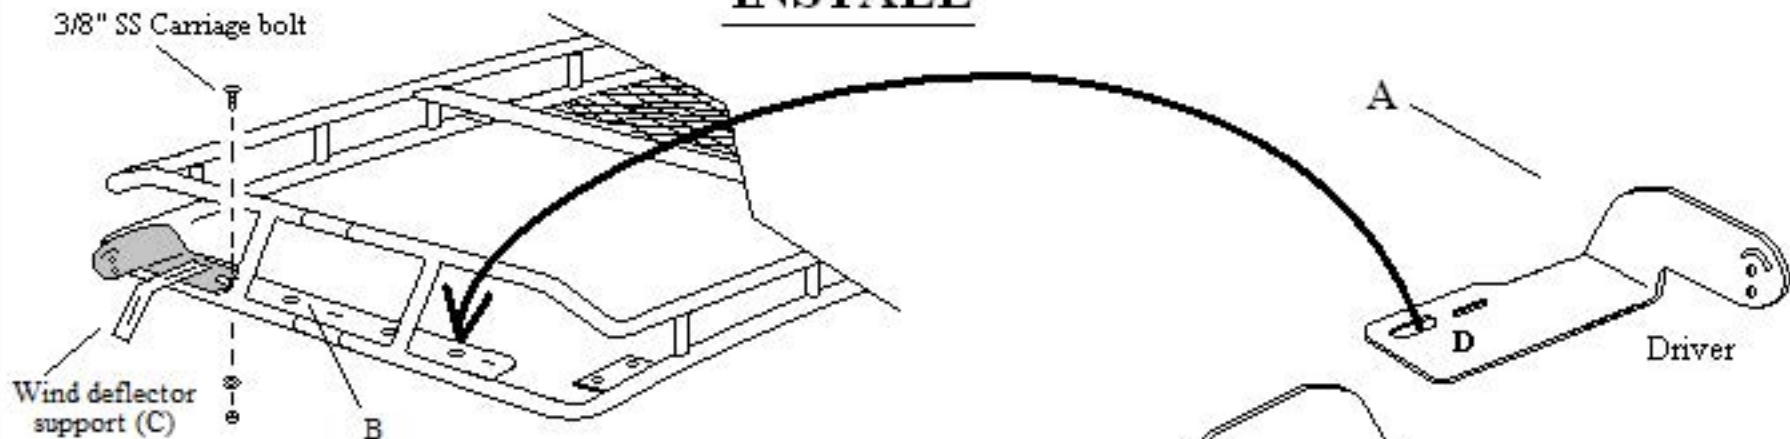

- A) Mount the Gobi wind deflector to roof rack per Gobi rack installation instructions
- B) Mount either the Driver or Passenger side light bar bracket (A) between light bar mount plate (B) and wind deflector supports (C) as shown. Remove the end wind deflector support (C) from the light bar (B) and wind deflector not shown one side at a time. Then install the LED support brackets (A) to the light bar (B) using a 3/8" carriage screw, flat washer and nylock nut. Install the wind deflector support on top of the LED bracket (A) as shown using the supplied longer 1/4-20 x 1" button head wind deflector support screw and black nylon washers. Snug down at this time. Continue to the opposite side and apply the same procedure. Do not fully tighten screws, leave snug.
- C) Place the LED light bar between the brackets and secure in place with the LED hardware and snug down end nuts to hold LED light bar in place.
- D) Position LED with brackets to center and equal with the front of the roof rack. Re-position the wind deflector as shown in the Gobi rack installation guide and tighten in place then fully tighten all screws. Installation completed.