

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

The Gobi ladder must be inspected before each use to make certain attachments are secure, and for evidence of Wear. Misuse of the ladder or failure to observe the manufacturer's instructions as to installation, proper Attachment and maintenance will void any warranties that may be implied by law.

CAUTION

**"LADDER IS TO BE TRAVERSED UPON
ONLY
WHEN THE REAR DOOR TAIL GATE
AND LIFT GATE ARE FULLY
CLOSED AND LOCKED"**

**CAUTION: APPLY ANTI-SEIZE LUBRICANT TO ALL SCREWS
PRIOR TO INSTALLATION**

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Guidelines:

When using Load Carriers and Accessories, the user must understand the precautions. The points listed below will assist you in using the rack /carrier system and will encourage safety.

- For quality fits and safety, use only the recommended rack or accessory. Do not assume an accessory will fit, always check with dealer when obtaining new accessories. Use only approved accessories on load carriers. Using other brands will void your warranty.
- Make sure all knobs, bolts, screws, straps, and locks are firmly attached, tightened and locked before every trip. Knobs, bolts, screws, straps, and locks must be periodically inspected for signs of wear, corrosion, and fatigue. Check your load at stops during the trip to insure continued fastening security.
- Check local and state laws governing projection of objects beyond the width of a vehicle. **Be aware of the width and height of your cargo since low clearance branches, bridges, and parking garages can affect the load** All cargo will affect the vehicle's driving behavior. Never drive with any load, know, or rack in an open or unlocked position. All long loads such as, but not limited to sailboards, surfboards, kayaks, canoes, and lumber must be tied down front and rear to the bumpers or tow hooks, of the vehicle.
- Remove your rack accessories when they are not in use, before entering car washes, prior to taking in your vehicle for service, and whenever clearance may be an issue.
- All locks must be turned and moved periodically to insure smooth operation. Use graphite or similar dry lubricant to help this. Locks are designed to deter vandalism and theft. Remove valuable gear if your vehicle is unattended for an extended period. Place at least one key in the glove compartment.
- For safety to your vehicle and rack system, obey all posted speed limits and traffic cautions. Adapt your speed to the conditions of the road and the load being carried.
- Do not use load carriers and accessories for purposes other than those for which they were designed. Do not exceed their carrying capacity.
- Consult with your dealer if you have any questions regarding the operations and limits of this product. Review all instructions carefully.


CAUTION

USE ANTI-SEIZE LUBRICANT ON ALL SCREWS

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Included in kit


Letter	Description	Location	Quantity
A	GOBI HUMMER EV REAR DRIVER SIDE LADDER	Main box	1
B	LOWER LADDER MOUNTING BRACKET	strapped to ladder	1
C	LADDER HANGER PLATE	strapped to ladder	1
D	GOBI LADDER MOUNTING HARDWARE CONTENTS: 2- 5/16" Nuts SS 2- 5/16" Lock washer SS 2- 3/8" Flat washer SS 1- 1/8" Allen wrench 1- 3/16" Short Allen wrench 1- Pack Anti-seize 2- 5/16-18 x 1" SS Button head screws 2- 5/16" SS Flat washers 2- 5/16" SS Lock washers	BAG #1	1

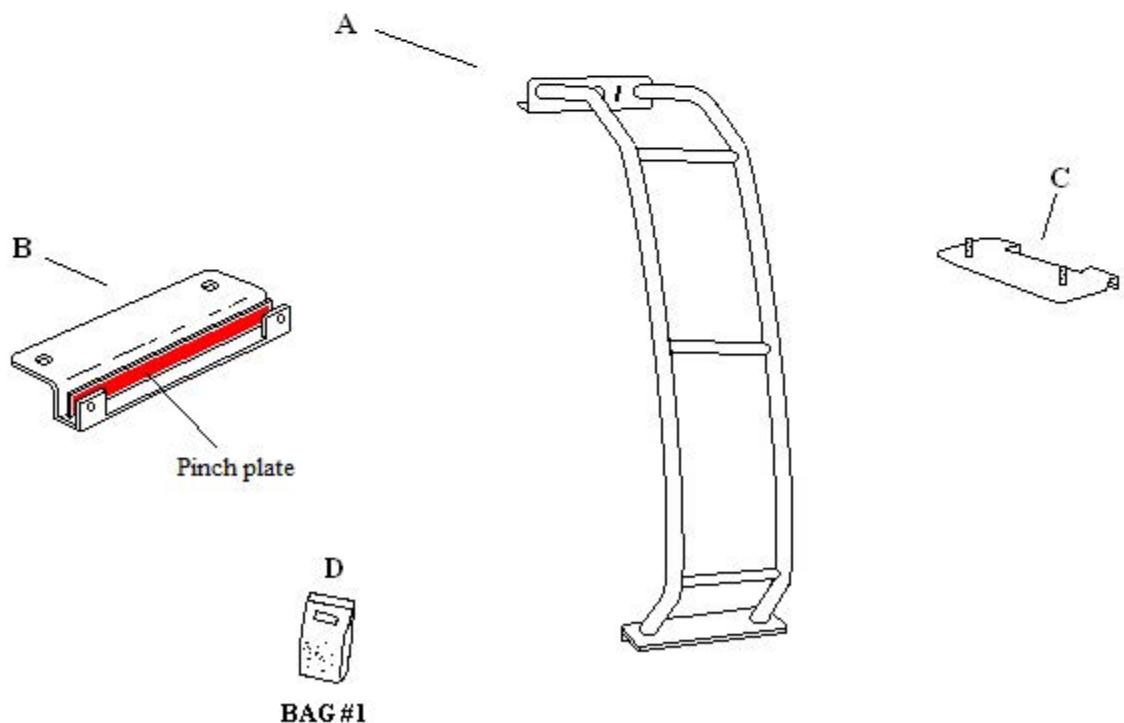

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Fig. 1**Fig. 2**

As shown in Fig. 1, measure 5-1/4" from the outside of the driver side rear roof top trim. Place a piece of masking tape to mark the edge of the 5-1/4" measurement. Clean the area on the top of the rear door to the right-hand side of the marker tape where hanger plate (C) will be placed, as shown in Fig. 4 with denatured alcohol prior to installation. As shown in Fig. 2, remove hanger plate "C" from your hardware package.

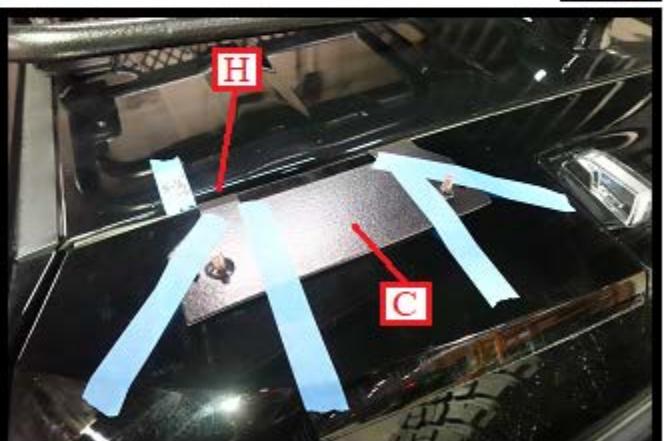Fig. 3**Fig. 4**


As shown in Fig. 3 and Fig. 4, do not remove the double back adhesive tape from the back of hanger plate (C). Set hanger plate (C) hooked end (H) onto the upper doors edge. Line up the left side of hanger plate hook (H) with the masking tape marker and use masking tape to hold down in place temporarily.

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Fig. 5



Fig. 6

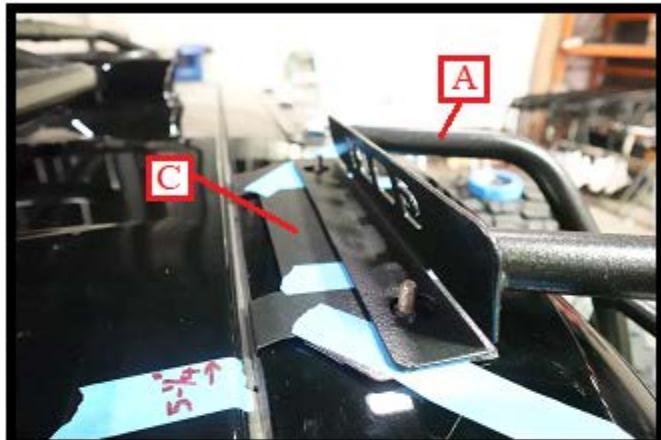

As shown in Fig. 5 and Fig. 6, place ladder (A) onto hanger plate (C) and allow ladder to rest on rear door as shown in Fig. 7.

Fig. 7


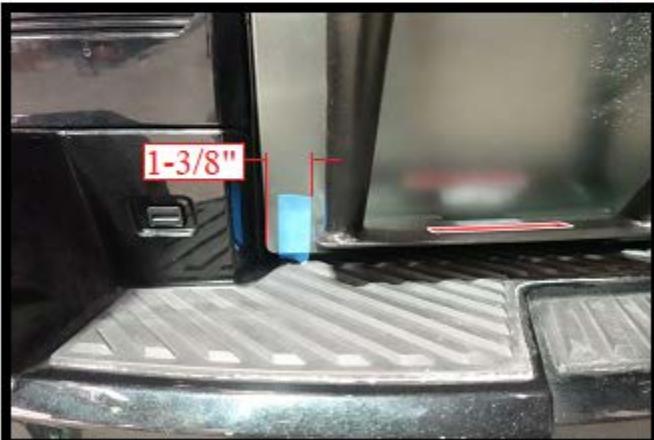


Fig. 8

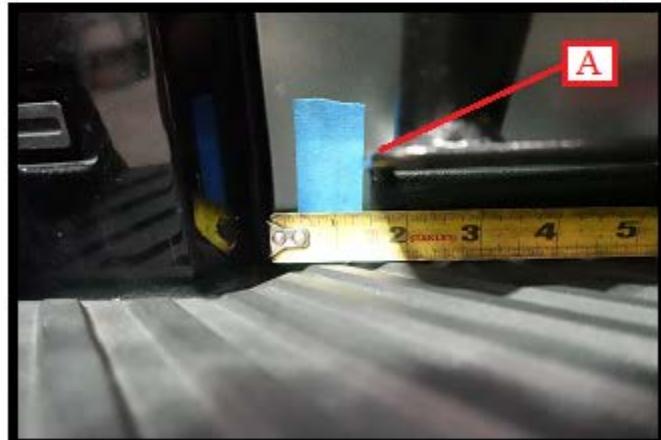

As shown in Fig. 7 and Fig. 8, measure 1-3/8" from the bottom left edge of the rear door and place a piece of masking tape to mark the edge of 1-3/8". Fold the tape under the door for a later visual aid marker. As shown in Fig. 8, this is where the left bottom edge of ladder (A) will be placed during the final installation. Remove the ladder for the next step.

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Fig. 9



Fig. 10



As shown in Fig. 9, remove the red double back tape protective covering from the back of hanger plate (C). As shown in Fig. 10 and Fig. 11, set hanger plate (C) back in place as previously shown in Fig. 3 & Fig. 4.

Fig. 11

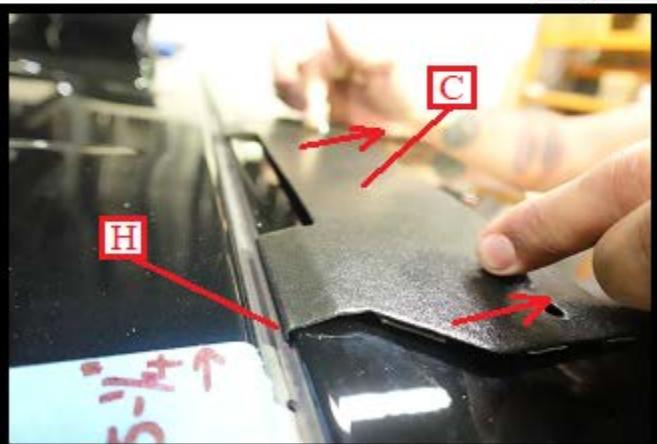


Fig. 12



As shown in Fig. 11, align hanger plate hook (H) with masking tape marker and pull back with some force in the direction of the red arrows. Press down and hold in place for 30 seconds.

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Fig. 13



Fig. 14




As shown in Fig. 13 and Fig. 14, remove pinch plate (P) from clamp (B) of your hardware kit. Use the masking tape marker shown in Fig. 13 and Fig. 14 and align pinch plate with masking tape marker and bottom edge of rear door as shown in Fig. 15.

Fig. 15



Fig. 16

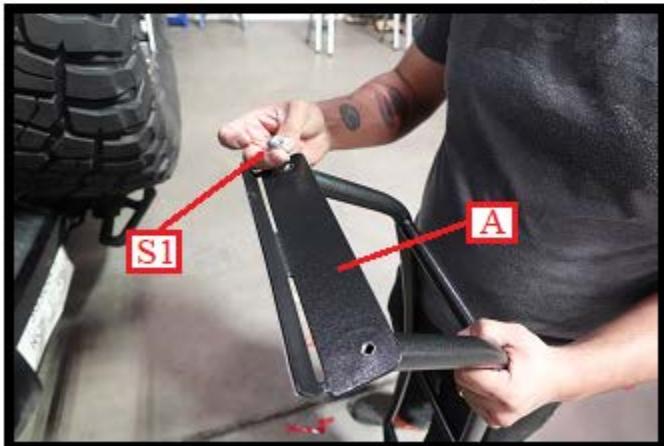

Pinch place (P) is shown installed in Fig. 15. As shown in Fig. 16, turn the ladder over so the bottom of the ladder is facing up. Remove both 5/16-18 x 1" button head screws, lock washers and flat washers (S1) from the bottom of the ladder. Place set screws (S1) nearby as they will be needed shortly.

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Fig. 17


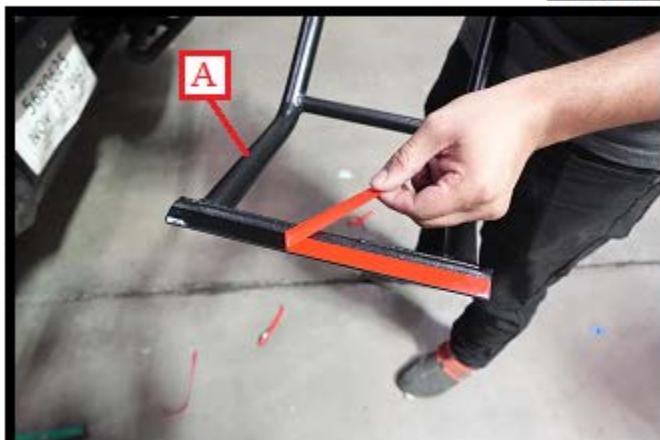


Fig. 18



As shown in Fig. 17, remove the protective covering on the lower ladder double back tape. Then as shown in Fig. 18, place ladder (A) back onto hanger plate (C) as previously done on Fig. 5 and Fig. 6.

Fig. 19

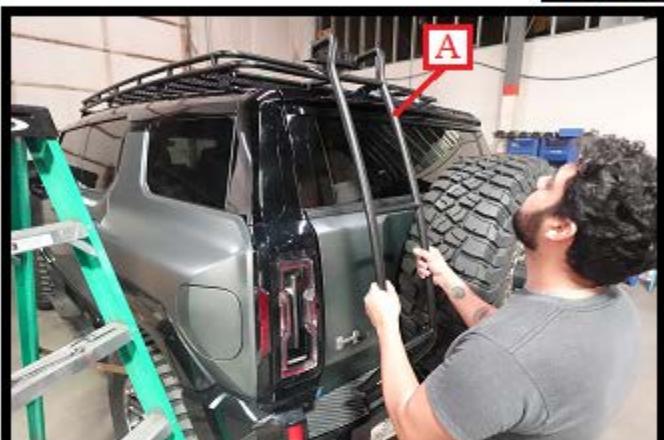

Align ladder with
lower door edge

Fig. 20



As shown in Fig. 19, with the rear door closed, pull down on ladder (A) shown by a red arrow and line up the left edge of ladder (A) with masking tape marker previously installed. While holding the ladder down firmly against the door, open rear door partially as shown in Fig. 20. Make certain the ladder is lined up with the bottom of door shown in Fig. 20. As shown in Fig. 20, remove lower ladder clamp plate (B) from your hardware kit.

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

Fig. 21


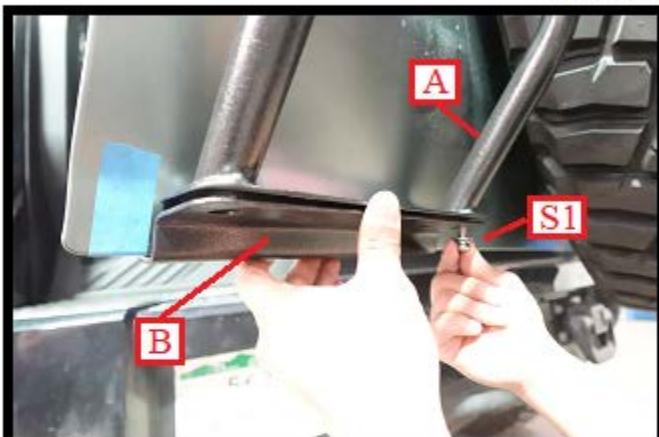


Fig. 22

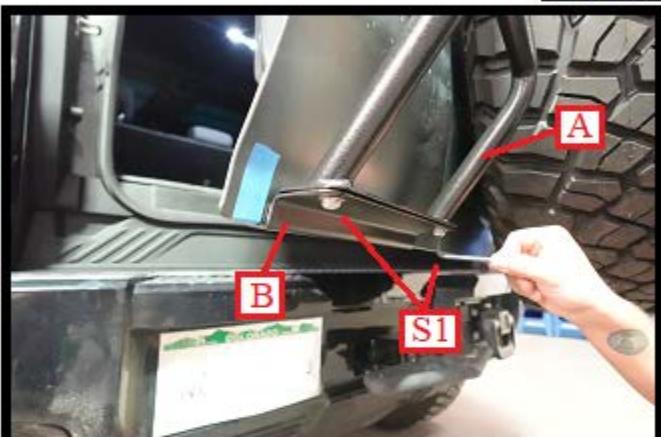

As shown in Fig. 21, thread back in place screws (S1) removed earlier in Fig. 16 up through clamp plate (B) then into lower ladder (A). As shown in Fig. 22, fully tighten both screws (S1) using the 3/16" Allen wrench supplied in parts Bag #1.

Fig. 23



Fig. 24



As shown in Fig. 23, use the supplied 1/8" Allen wrench and tighten down both 1/4" sets screws (S2). As shown in Fig. 24 tighten both jam nuts (S3) using a 7/16" open end wrench, do not over tighten.

GOBI HUMMER EV REAR DOOR DRIVER SIDE LADDER INSTALLATION INSTRUCTIONS

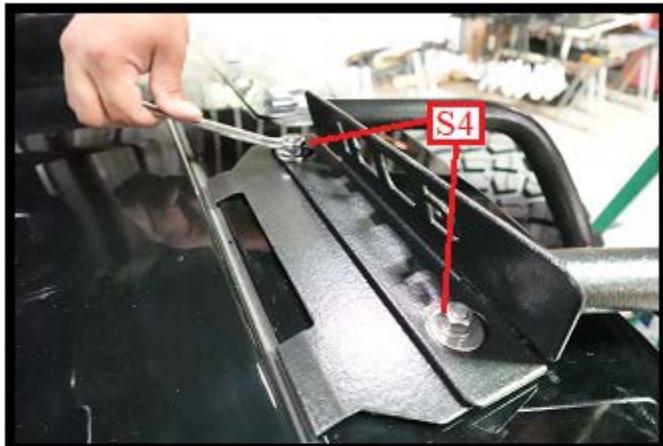


Fig. 25

As shown in Fig. 25, remove one 5/16-18 nut, lock washer and flat washer (S4) and thread onto each threaded stud of hanger plate (C). Fully tighten each assembly (S4) completely but do not over tighten. Remove all masking taper markers.



INSTALLATION COMPLETED